


















KEYPAD K8 ICONS & PART NUMBERS

 NEUTRAL LVT60007E001	 CLEARANCE LIGHTS LVT60007E020	 IGNITION LVT60007E039	 ARROW LVT60007E058
 LAUNCH CONTROL LVT60007E002	 SPOTLIGHT LVT60007E021	 FAN LVT60007E040	 DRINK LVT60007E059
 PIT LVT60007E003	 FRONT FOG LIGHTS LVT60007E022	 OIL FAN LVT60007E041	 PLUS LVT60007E060
 DRIVE LVT60007E004	 REAR FOG LIGHTS LVT60007E023	 STEER FAN LVT60007E042	 MINUS LVT60007E061
 START/STOP ENGINE LVT60007E005	 LOW BEAM LVT60007E024	 PUMP FAN LVT60007E043	 ABS LVT60007E062
 OK LVT60007E006	 MASTER LIGHTS LVT60007E025	 START LVT60007E044	 SUSPENSIONS LVT60007E063
 RESET LVT60007E007	 HIGH BEAM LVT60007E026	 PARKING LVT60007E045	 AIR CONDITIONED LVT60007E064
 BOOST LVT60007E008	 WORK LIGHTS LVT60007E027	 RADIO LVT60007E046	 CRUISE CONTROL LVT60007E065
 RAIN LVT60007E009	 WIPER WASH LVT60007E028	 FUEL PUMP LVT60007E047	 HAZARD WARNING LIGHT LVT60007E066
 PREVIOUS LVT60007E010	 NUMBER 0 LVT60007E029	 FUEL PUMP 2 LVT60007E048	 4WD LVT60007E067
 MENU LVT60007E011	 NUMBER 1 LVT60007E030	 HELMET COOLING LVT60007E049	 DIFF LOCK LVT60007E068
 MODE LVT60007E012	 NUMBER 2 LVT60007E031	 WIPER LVT60007E050	 TRACTION CONTROL ON LVT60007E069
 NEXT LVT60007E013	 NUMBER 3 LVT60007E032	 WINDOW DEFROSTER LVT60007E051	 TRACTION CONTROL OFF LVT60007E070
 MEMORY/OK LVT60007E014	 NUMBER 4 LVT60007E033	 ESP ON LVT60007E052	 LIGHTBAR LVT60007E071
 QUIT LVT60007E015	 NUMBER 5 LVT60007E034	 ESP OFF LVT60007E053	 BLACK ICON LVT60007E072
 WINCH IN LVT60007E016	 NUMBER 6 LVT60007E035	 REAR GEAR LVT60007E054	
 WINCH OUT LVT60007E017	 NUMBER 7 LVT60007E036	 WATER PUMP LVT60007E055	
 PDM RESET LVT60007E018	 NUMBER 8 LVT60007E037	 STEERING WHEEL LVT60007E056	
 FUEL RESET LVT60007E019	 NUMBER 9 LVT60007E038	 HORN LVT60007E057	